



Instruction for assembling


Email: service@jiameiinc.com




Instruction for assembling

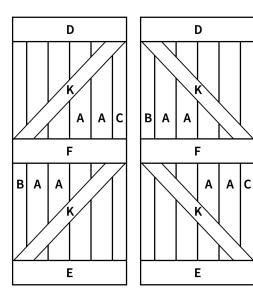

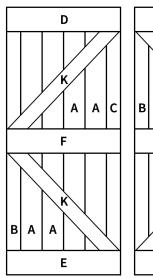

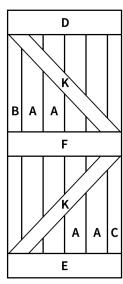

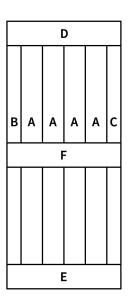

**K** Series

### PLEASE DECIDE THE APPEARANCE BEFORE ASSEMBLE

**SIDE VIEW** 

B: Left Outside Plank

A: Middle Plank

C: Right Outside Plank

**D**: Top Plank

E: Bottom Plank F: Central Plank

K: K Plank



**SINGLE DOOR** 

□ 24" × 84"

□ 28" × 84"

□ 30" × 84"

□ 36" × 84"

□ 38" × 84"

☐ 42" × 84"

SIZE

**DOUBLE DOOR**  $\square$  48" × 84"

□ 56" × 84"

□ 60" × 84"

□ 72" × 84"

□ 76" × 84"

□ 84" × 84"

**TOOLS NEEDED** 

















Avoid direct sunlight.



Avoid moisture.



Avoid rain.



STEP 01: Parts Included


# **KNOTTY PINE DIY BARN DOOR**

Instruction for assembling

### Mini Double-Z Series

# Remarks: The quantity of middle planks will vary depending on the size of the product. Left Outside Plank Bottom Plank Right Outside Plank SIDE VIEW A: Middle Plank B: Left Outside Plank F: Central Plank C: Right Outside Plank K: K Plank


# STEP 02: Combine lower planks

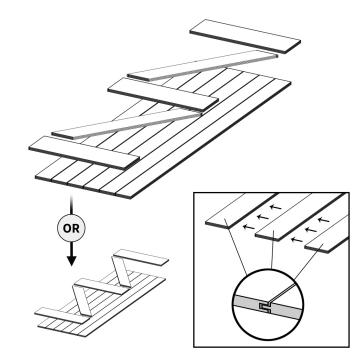


### STEP 03: Combine upper and lower planks

D: Top Plank

Once all planks are flush and squre, secure the top and bottom planks with the screws provided. Using the clamps secure all 4 comers. With the pre-drilled holes as your guide, drill(1/8"bit) a shallow pilot hole into 4 corner holes. Do not drill completely through the door plank. Using a screw driver insert screws into the 4 corner pre-drilled holes. Continue process with the remaining screws. Make sure all screws are installed and secure. It is important to check that all planks are

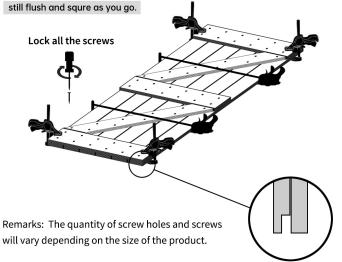


### STEP 04: Installing door and track

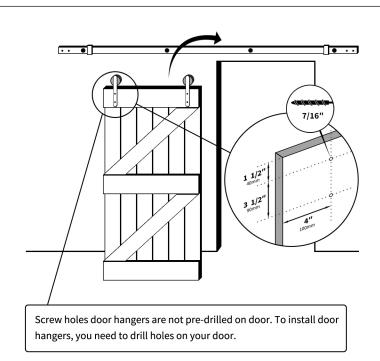




Instruction for assembling

# **K** Series

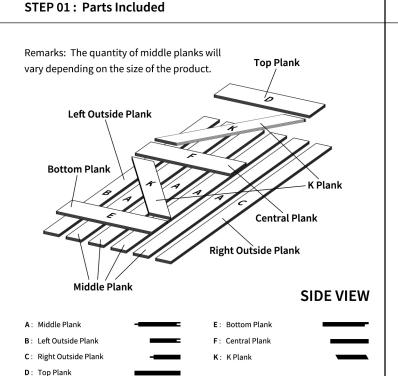


### STEP 02: Combine lower planks

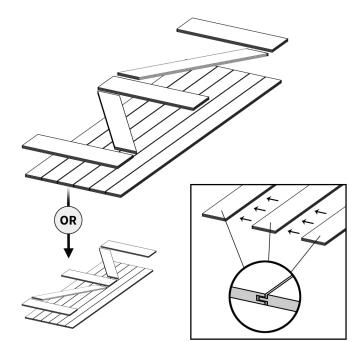


### STEP 03: Combine upper and lower planks

Once all planks are flush and squre, secure the top and bottom planks with the screws provided. Using the clamps secure all 4 comers. With the pre-drilled holes as your guide, drill(1/8"bit) a shallow pilot hole into 4 corner holes. Do not drill completely through the door plank. Using a screw driver insert screws into the 4 corner pre-drilled holes. Continue process with the remaining screws. Make sure all screws are installed and secure. It is important to check that all planks are

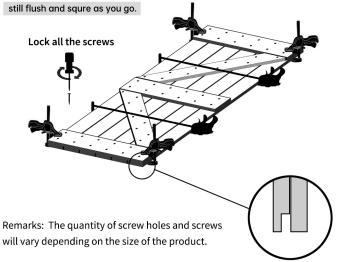


STEP 04: Installing door and track

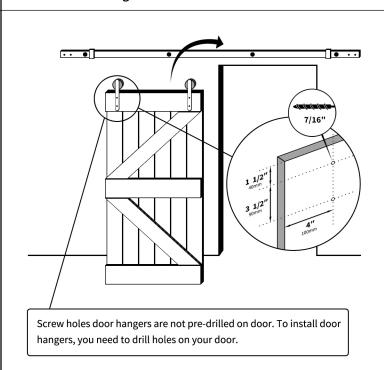




Instruction for assembling

### **Mid-Bar Series**

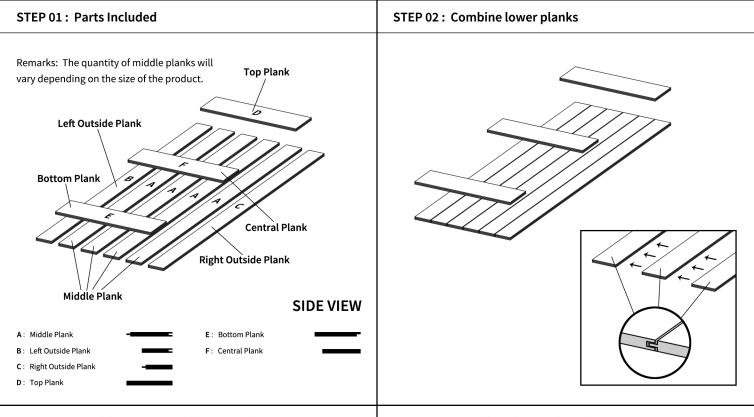

### STEP 03: Combine upper and lower planks

Once all planks are flush and squre, secure the top and bottom planks with the screws provided. Using the clamps secure all 4 comers. With the pre-drilled holes as your guide, drill(1/8"bit) a shallow pilot hole into 4 corner holes. Do not drill completely through the door plank. Using a screw driver insert screws into the 4 corner pre-drilled holes. Continue process with the remaining screws. Make sure all screws are installed and secure. It is important to check that all planks are

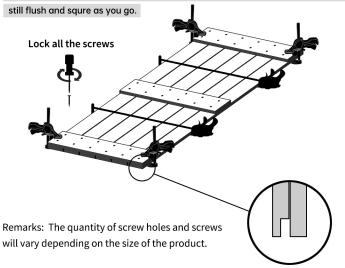

### STEP 04: Installing door and track

